

Ceramic Wall Heater MUR SERIES

Code: CL20220

MANUAL INSTRUCTION

Thank you for choosing our products . All the electric appliances are madewith great professional skills with use of high quality materials. There is no doubt that you will appreciate all the options and will be charmed with the moderndesign of our products.

Before use the appliance, please, read the manual instruction carefully. It contains important information regarding correct use of the appliance and it's maintenance.

Keep the manual instruction with warranty card, sales check and packing materials.

Essential safeguards

- This appliance is intended for household use only, not for commercial or industrial use.
- Do not use for other than intended use.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped damaged in any manner.
- **To protect against fire, electric shock or injury, do not place cord, plug, or appliance in water or other liquid.**
- A protective cutout device can be used as a secondary protection. Please consult the specialist before installation.
- Before plugging the device in outlet, please make sure, that the voltage in the ac source agrees with technical characteristics of the appliance.
- **The wrong use conflicting with the safeguards deprives the customer of the right for warranty service.**
- The appliance may be plugged in just the power net with ground connection. For your safety the ground connection must correspond with state rules and standards.
- When plugging in, be sure, that the appliance is switched off.
- Do not use outdoors. Do not place on or near a hot gas or electric burner or in a microwave or heated oven.
- Close supervision is necessary when any appliance is used near children.
- Don't carry the appliance holding it by the power cord. To disconnect, remove plug from outlet. Do not yank on cord as it may damage cord and eventually cause electric shock.
- Do not let cord hang over the appliance or over the edge of table.
- If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- You should not repair the appliance by yourself. It must be done just by qualified specialists of our service center.
- Only original spare parts may be used for repair.



Special safeguards

It is necessary to follow the mentioned below security measures to reduce the risk of fire or electric shock:

- The power and voltage of the power line connecting to the heater, should be in accordance with data, shown at the side of the appliance.
- It is forbidden to cover the heater while it's running.
- The hot air outlet reaches very high temperature. Don't you touch it.
- Unplug the power cord from the power line before cleaning or for storage.
- Don't put the plug, power cord or the appliance into the water or other liquids.
- Don't let your baby to use the appliance
- Don't insert fingers or other things into the appliance.
- It's forbidden to pull, writhe or damage the power cord in any other way
- The power cord, used in the appliance is of special type and may be replaced just by service center's specialist.
- The repair of the appliance maybe performed just by professional electricians. Mistakes in repair bring great hazard to the user.
- Don't use the appliance with broken power cord after any damage. Once you suspect any problem, deliver the appliance to the service center.

Description



- **Installation.**

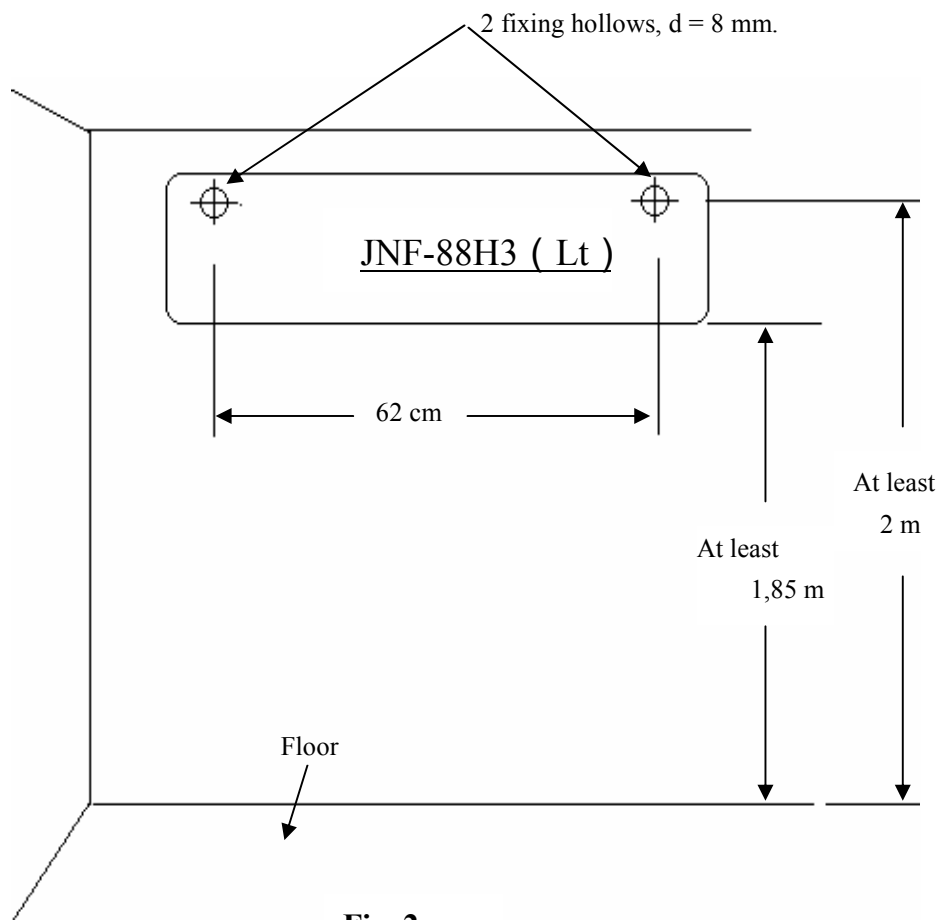



Fig. 2

- The fixing hollows should have 62.0 cm between each other. At the same time they should be situated at least 2 meters from the floor. In this case, the wall heater will be at 1.85 meter from the floor level. Please, refer to the figure 2. The power connection should be built in at a height unreachable for wall men.
- The depth of fixing hollows should be 42-45 mm, diameter 8 mm.
- If the power cord is too long, you may coil it inside the heater body.
- Once the heater is hanged, you should tighten the screws.

IV. Appliance operation

- Observing polarity, insert the batteries into the remote control.
- When pressing a button on the remote control, you will hear tones.
- When pressing the buttons “ON/OFF, FUNCTION” of the control panel or remote control, you will hear tones again. The fan will be turned on. The leaf of the heater will open automatically and a stream of air will flow from the appliance. At the same time ”Power” indicator will light with red color.
- Once pressing the button “HEATING” on the control panel or remote control, the first heating mode (1 kW) is turned on. If you press the “HEATING” button for the second time, the second heating mode (2 kW) will be turned on. The heating mode will be turned off, if you press the “HEATER” button for the third time.
- **“Changing the direction of air stream” function setting.** Press “Swing” button to turn the function on. Press the “Swing” button one more time to turn the function off.
- **Timer setting.** You may turn on the timer from 0.5 of hour till 7.5 hour. For this press the button “TIMER” on the control panel or on the remote control. Every press on the button increases the timer time on 0.5 hour.

Attention. If you turn the appliance off, the timer settings will be deleted from the memory. . When you turn off the wall heater, it will operate in ventilation mode for 30 seconds in order to cool the heating elements. The indicator will light for all this time. After that the indicator and the appliance will turn off automatically.

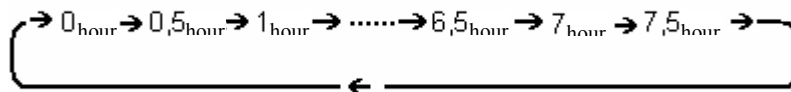

VI. Cleaning and maintaining.

- Before cleaning unplug the appliance and let it get cool. Wipe it with soft wet cloth. Don't use solvents or abrasives.
- You should regularly clean, wipe the dust from the appliance for the dust negatively effects on the operation of the wall heater.
- Don't you scrape the body with hard instrument.

VII. Specification

Voltage: 220-230 V

Frequency: ~50 Hz

Power: 2000W

Note: Some differences between the user's manual and the article are possible to exist, according to the permanent process of technological modernization. We do hope that it will not cause you any inconveniences.



Export Department:

Provenza, 392 pl. 2 08025 Barcelona

Phone +34 93 446 27 81

Fax +34 93 446 27 96

export@salvadorescoda.com